



# ALL AMERICAN MONITORING

## Programming Steps – DSC 4020

### Program Keyswitch Zone & Output:

KEYPAD DISPLAY	ENTER ON KEYPAD	COMMENTS
Date & Time	*84020	To enter programming mode
Select (00)		To enter Partition area
System Area	01	
Select (00)		To enter Add/Edit Partition
Add/Edit Par	00	
Select (00)		To enter Partition 1
Partition 1	01	
Select (00)		To enter Zone Assignment
Partition Acct. #	03	
Select (00)		To Edit Zones (00 to add Zone)
Add New Zone	01	
Select (00)		To enter Zone 1
Zone 1	001*	
Select (00)		To go to Zone type
Zone Label	01	
Select (00)		To select Momentary Arm
Momentary Arm	25	
Select (00)		Press # until you go back to the Main Menu
Zone Label	####	
Select (00)		To enter System Area
System Area	00	
Select (00)		To go to System Options
Installer Opt's	02	
Select (00)		To go to Zone Supervision
System Toggles	04	
Select (00)		To select Single EOL option, press > until you find "Single EOL"
Single EOL	01	
Select (00)		To go back to previous section
System Toggles	#	
Select (00)		To go to PGM Outputs
Installer Opt's	07	
Select (00)		To select Inv. Arm Status
Main PGM 1 Out	00	

Select (00)		To select Inv. Arm Status
Inv. Arm Status	07	
Select (00)		Press * until Y (Yes), press # until
Partition 1	* #	you exit programming mode

**Set to Contact ID:**

KEYPAD DISPLAY	ENTER ON KEYPAD	COMMENTS
Date & Time	*84020	To enter Programming Mode
Select (00)		To enter Partition Area
System Area	01	
Select (00)		To enter Add/Edit Partition
Add/Edit Par	00	
Select (00)		To enter Partition 1 account number
Partition 1	001	
Select (00)		To select the menu
Partition Acc. #	*	
Partition Acct. #		Enter the account number (1234 is an example)
Enter Hex	1234	
Select (00)		To exit to the main menu
Partition Acc. #	# #	
Select (00)		To enter System Area
System Area	00	
Select (00)		To select Communicator
Installer Opt's	04	
Select (00)		To select Main Items
Main Items	00	
Select (00)		To go to System Account Number
1st Number	03	
System Account#		Enter the same account number
Enter Hex	1234#	as you entered for Partition 1 above
Select (00)		To go to Program Telephone Number
1st Number	00	
Select (00)		To select 1st phone number
Pgm. Tel Number	00	
D _____	123456#	Enter phone number # to go back
Select (00)		To go to Communicator Format
Pgm. Tel Number	01	
Select (00)		To select DTMF Contact ID
DTMF Contact ID	02	
Select (00)		To go to Dialer Direction
Pgm. Tel Number	02	
Select Toggle		Press * until Y (Yes), press >
	* >	to move to next option
Select Toggle		Press * until Y (Yes), press >
	* >	to move to next option
Select Toggle		Press * until Y (Yes), press # #
	* # # #	to go back to Main Items


Select (00)	01	To go to Communication Toggles
Select Toggle	* >	Press * until Y (Yes), press > to move to next option
Select Toggle	* >	Press * until Y (Yes), press > until you find "TLM Enabled"
Select Toggle	* >	Press * until N (No), press > until you find "6 Digit account"
Select Toggle	* # # #	Press * until N (No), press > # until you exit the Programming Menu



# ALL AMERICAN MONITORING

## Wiring the MN01-4G Cellular Communicator and Programming the Panel

### DSC PC4020

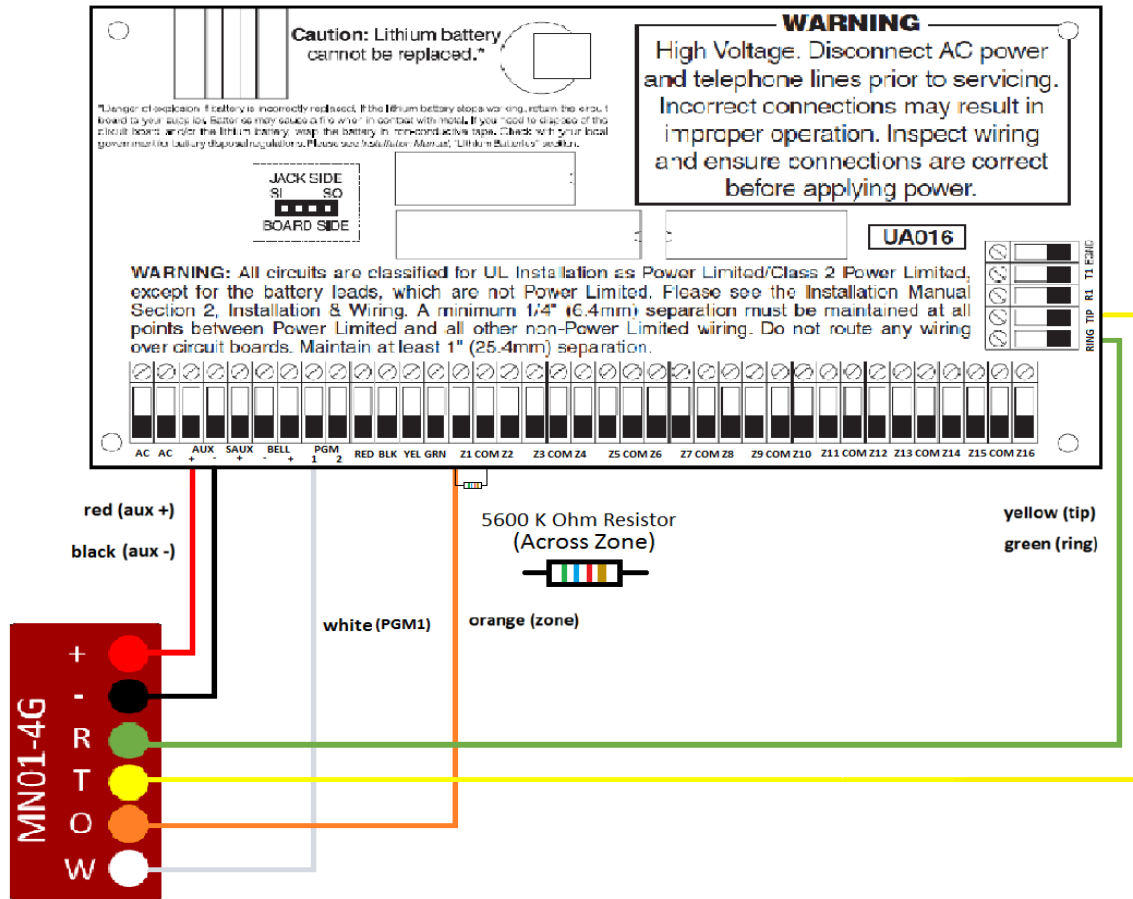

**NEW FEATURE:** For MINI01-4G-V2, the status of the panel can be retrieved not only from the status PGM but now also from the Keyswitch arm/disarm. Therefore, wiring the white wire and programming of the status PGM of the panel is optional.

Wiring the white wire is necessary only if the Open/Close reporting is enabled.

**IMPORTANT NOTE:** The Open/Close reporting needs to be enabled during the initial pairing procedure.