



ALL AMERICAN MONITORING

Programming Steps – DSC Alexor

Program Keyswitch zone& Output:

KEYPAD DISPLAY	ENTER ON KEYPAD	COMMENTS
Enter Section	009	Zone 1 keyswitch
Enter Data XX	22	22 is for Zone Type Keyswitch for I/O 1 XX is previous value
Enter Data XX	05	05 to program Armed Status for I/O 2, XX is previous value
Enter Section	013	First System Options (to select I/O as Input &
Toggle Option 1-----	1 #	PGM Assuming the panel is defaulted press the toggle buttons until 1 is ON and 2 is OFF
Enter Section	206	Enter Zone Assignment.
Toggle Option 1-----	1 #	Toggle option 1 to ON to enable the Keyswitch zone.
Press # to go to the next section		

Enable Open/Close Reports:

KEYPAD DISPLAY	ENTER ON KEYPAD	COMMENTS
Enter Section	351	To program phone 1 call direction
Toggle Option 1-----	1 #	Toggle 1 to ON for alarms
Enter Section	367	Open/Close Communicator Cell directions.
Toggle Option 1-----	1 #	Toggle 1 to ON to enable Open/Close reports
Enter Section	380	First Communicator Options
Toggle Option 1-----	1 #	Toggle 1 to ON to Communications Enabled

Set to Contact ID:

KEYPAD DISPLAY	ENTER ON KEYPAD	COMMENTS
Enter Section	350	Program alarm Format
Enter Data	03 #	03 is for CID Format


Program Phone & Account #:

KEYPAD DISPLAY	ENTER ON KEYPAD	COMMENTS
Enter Section	301	Enter Receiver Number OR
Enter Data	*****	Any 10 digits will work
Enter Section	310	Enter Account Number
Enter Data	???	
Enter Section	#	To get back to main menu



ALL AMERICAN MONITORING

DSC Alexor

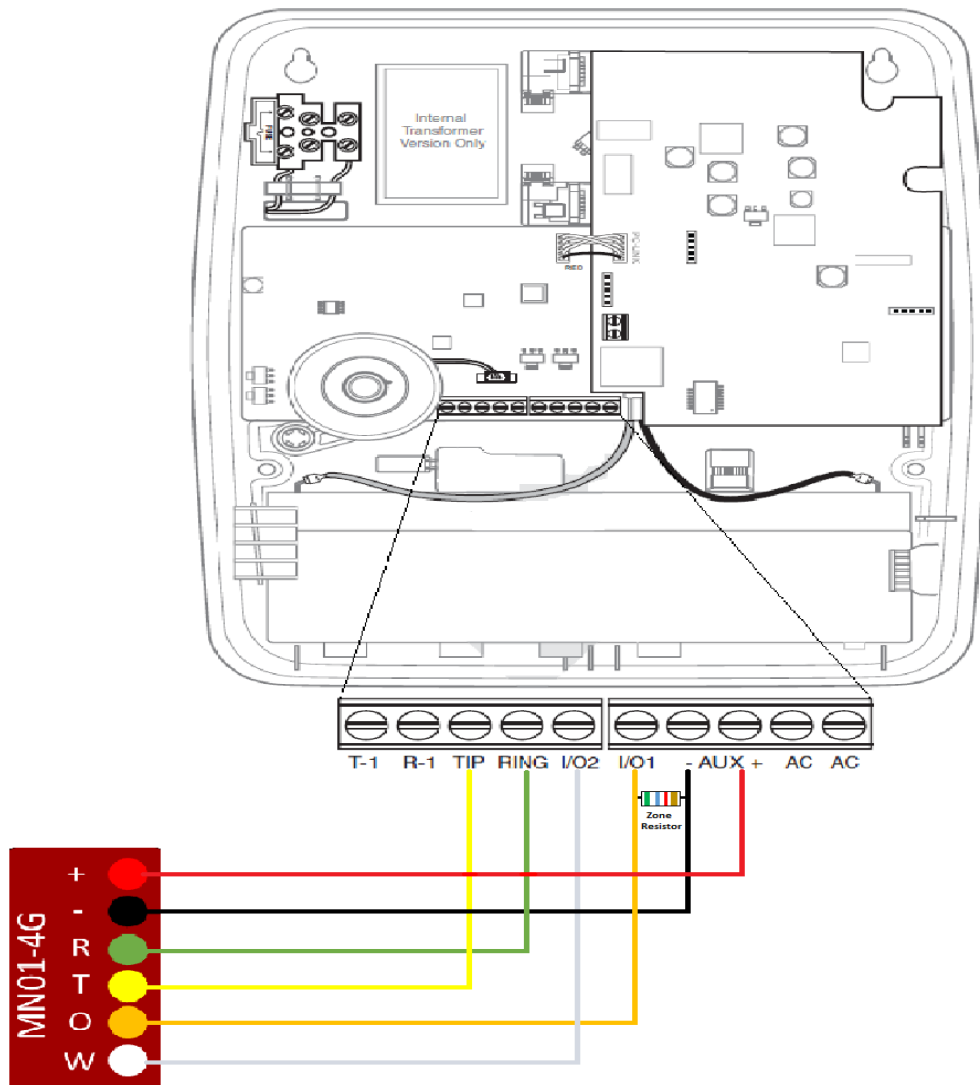

NEW FEATURE: For Mini01-4G-V2, the status of the panel can be retrieved not only from the status PGM but now also from the Keyswitch arm/disarm. Therefore, wiring the white wire and programming of the status PGM of the panel is optional.

Wiring the white wire is necessary only if the Open/Close reporting is enabled.

IMPORTANT NOTE: The Open/Close reporting needs to be enabled during the initial pairing procedure.