



ALL AMERICAN MONITORING

Programming Steps – DSC 4020

Program Keyswitch Zone & Output:

KEYPAD DISPLAY	ENTER ON KEYPAD	COMMENTS
Date & Time	*84020	To enter programming mode
Select (00)		To enter Partition area
System Area	01	
Select (00)		To enter Add/Edit Partition
Add/Edit Par	00	
Select (00)		To enter Partition 1
Partition 1	01	
Select (00)		To enter Zone Assignment
Partition Acct. #	03	
Select (00)		To Edit Zones (00 to add Zone)
Add New Zone	01	
Select (00)		To enter Zone 1
Zone 1	001*	
Select (00)		To go to Zone type
Zone Label	01	
Select (00)		To select Momentary Arm
Momentary Arm	25	
Select (00)		Press # until you go back to the Main Menu
Zone Label	####	
Select (00)		To enter System Area
System Area	00	
Select (00)		To go to System Options
Installer Opt's	02	
Select (00)		To go to Zone Supervision
System Toggles	04	
Select (00)		To select Single EOL option, press > until you find "Single EOL"
Single EOL	01	
Select (00)		To go back to previous section
System Toggles	#	
Select (00)		To go to PGM Outputs
Installer Opt's	07	
Select (00)		To select Inv. Arm Status
Main PGM 1 Out	00	

Select (00) Inv. Arm Status	O7	To select Inv. Arm Status
Select (00) Partition 1	* #	Press * until Y (Yes), press # until you exit programming mode

Set to Contact ID:

KEYPAD DISPLAY	ENTER ON KEYPAD	COMMENTS
Date & Time	*84020	To enter Programming Mode
Select (00) System Area	O1	To enter Partition Area
Select (00) Add/Edit Par	OO	To enter Add/Edit Partition
Select (00) Partition 1	O01	To enter Partition 1 account number
Select (00) Partition Acc. #	*	To select the menu
Partition Acct. # Enter Hex	1234	Enter the account number (1234 is an example)
Select (00) Partition Acc. #	# #	To exit to the main menu
Select (00) System Area	OO	To enter System Area
Select (00) Installer Opt's	O4	To select Communicator
Select (00) Main Items	OO	To select Main Items
Select (00) 1st Number	O3	To go to System Account Number
System Account# Enter Hex	1234#	Enter the same account number as you entered for Partition 1 above
Select (00) 1st Number	OO	To go to Program Telephone Number
Select (00) Pgm. Tel Number	OO	To select 1st phone number
D _____	123456#	Enter phone number # to go back
Select (00) Pgm. Tel Number	O1	To go to Communicator Format
Select (00) DTMF Contact ID	O2	To select DTMF Contact ID
Select (00) Pgm. Tel Number	O2	To go to Dialer Direction
Select Toggle	* >	Press * until Y (Yes), press > to move to next option
Select Toggle	* >	Press * until Y (Yes), press > to move to next option
Select Toggle	* # # #	Press * until Y (Yes), press # # to go back to Main Items

Select (00)	01	To go to Communication Toggles
Select Toggle	* >	Press * until Y (Yes), press > to move to next option
Select Toggle	* >	Press * until Y (Yes), press > until you find "TLM Enabled"
Select Toggle	* >	Press * until N (No), press > until you find "6 Digit account"
Select Toggle	* ###	Press * until N (No), press > # until you exit the Programming Menu



ALL AMERICAN MONITORING

Wiring the MN02-LTE Cellular Communicator and Programming the Panel

DSC PC4020

