



ALL AMERICAN MONITORING

Programming Steps – VISTA 10P/15P/20P

Programming: Basic Communication

KEYPAD DISPLAY	ENTER ON KEYPAD	COMMENTS
Primary Phone Number	*41	Enter Primary Phone Number
Primary Account Number	*43	Enter Primary Account Number
Phone System Select	*47	Enter 1 For Tone Dialing
Reporting Format	*48	Enter 7, 7 For Contact ID Format
Split/Dual Reporting	*49	Enter 0 For All Reports
15 Sec Dialer Delay	*50	Enter 0 For NO Dialer Delay
Symphony (AUI) Enable	*189	Enter 0 , 0
Keypad 7 Address 21	*194	Enter 1 , 0




ALL AMERICAN MONITORING

Wiring the MN02-LTE Cellular Communicator and Programming the Panel

VISTA 10P/15P/20P

Warning Incorrect connections may result in failure or improper operation. Inspect wiring and ensure connections are correct before applying power.

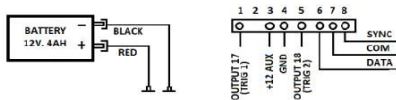

white (pin 5)

WARNING
High voltage. Disconnect AC power & telephones lines prior to servicing.

