



# ALL AMERICAN MONITORING

## **Programming Steps – SIMON XT**

---


1. Press Down Arrow 4 times to System Programming, Press OK button,  
Then enter installer code and press OK button.
2. Press Down Arrow, Press OK button, OK button again, Enter Account #, Press OK, Press Status.
3. Press Down Arrow, Press OK button, OK button again, Enter Receiver #, Press OK, Press Status.
4. Press Arrow Down 3 times to Reporting, Press OK button, Arrow Down 1 time, Press OK button,  
Phone 1 Press OK button, Arrow Down 1 time until you select ALL CID then Press OK.
5. Press Status 4 times to Exit Programing.



# ALL AMERICAN MONITORING

Wiring the MN01-4G Cellular Communicator  
and Programming the Panel

## SIMON XT

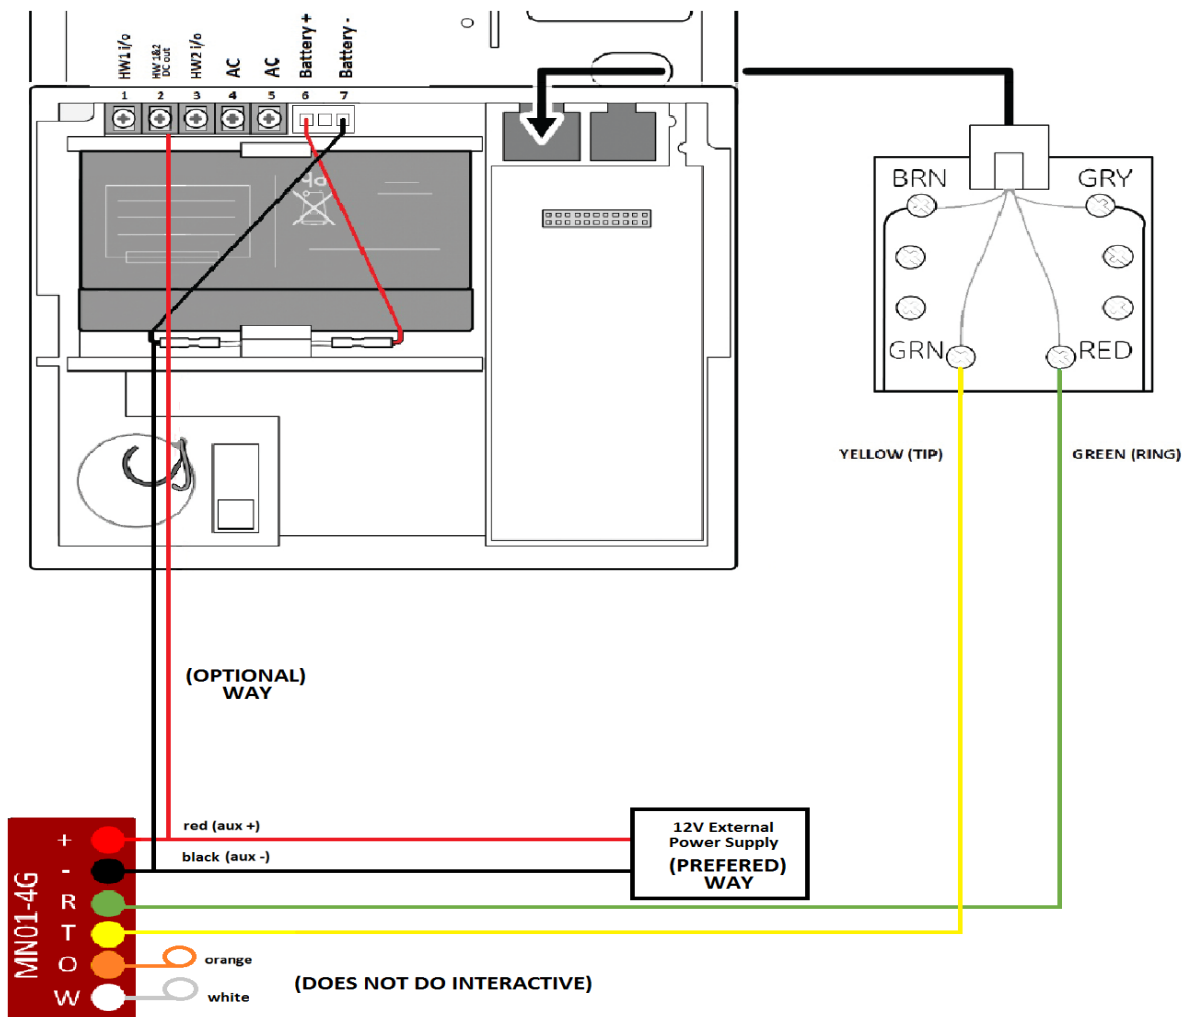

**NEW FEATURE:** For MiNi01-4G-V2, the status of the panel can be retrieved not only from the status PGM but now also from the Keyswitch arm/disarm. Therefore, wiring the white wire and programming of the status PGM of the panel is optional. Wiring the white wire is necessary only if the Open/Close reporting is enabled.

**IMPORTANT NOTE:** The Open/Close reporting needs to be enabled during the initial pairing procedure.